

MANUAL INSTRUCTION

FOR STORAGE, INSTALLATION, OPERATION AND MAINTENANCE OF PEKOS BALL VALVES

ANSI ZGKMS (D)			
Full Bore	Reduced Bore		
Cl. 900 NPS 3"-22"	Cl. 900 NPS 4"-22"		
CI. 1500 NPS 3"-18"	CI. 1500 NPS 4"-18"		
CI. 2500 NPS 2 1/2"-12"	CI. 2500 NPS 3"-12"		

Nr.196 28/05/21 Rev.7

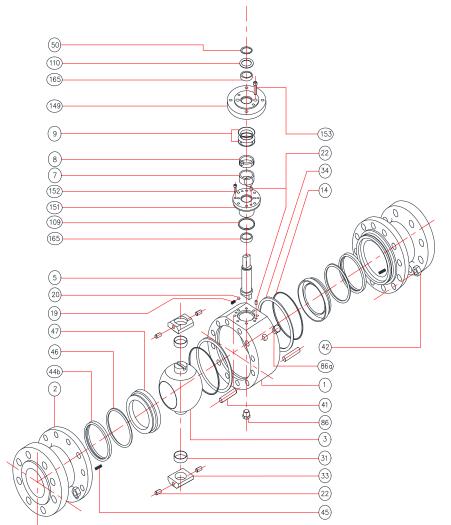


Table 1		
Pos.	Quant.	Description
1	1	Body 1
2	2	Body 2
•• 3	1	Ball
•• 5	1	Stem
• 7	1	Stem packing
8	1	Gland packing
9	3	Spring washer
• 14	2	Body seal 1
•• 19	1	Spring
•• 20	1	Antistatic ball
22	4+4	Stop pin
• 31	2	Bearing
33	2	Support bearing
• 34	2	Body seal 2
41	-	Stud
42	-	Nut
44b	2	Ring seat 2
45	-	Spring seat
• 46	2	Seat seal
•• 47	2	Seat
•• 50	1	Subjection ring
86	1	Drain plug
86a	1	Vent plug
• 109	1	Cover seal
•• 110	1	Subjection ring seal
149	1	ISO cover
151	1	Body cover 1
153	-	ISO cover bolt
• 165	2	Stem bearing

- Start-up: 5% of ordered quantity
- SOFT PARTS KIT
- METALLIC PARTS

Suggested materials to be checked at least every five (5) year service.

See point 5 (Maintenance)

Torque screw tightness values for studs/nuts (Nr. 41 & 42) can be found attached in document DC-08-07-03 PF "Screw torque".

1. SCOPE

This manual is intended as a guide to assist customers or end-users in the correct storage, installation and maintenance of PEKOS ball valves.

2. APPLICABILITY

This manual is applicable to full trunnion and metallic seats ball valves as per norm ANSI in the following pressures and sizes: Full Bore: NPS 3" - 22" Class 900; NPS 3" - 18" Class 1500, NPS $2\frac{1}{2}" - 12"$ Cl. 2500 & Reduced Bore: NPS 4" - 22" Cl. 900; NPS 4" - 18" Cl. 1500, NPS 3" - 12" Cl. 2500.

3. STORAGE

3.1 Maintenance during storage

- a. Stainless steel and carbon steel valves should be stored separately, to protect the stainless steel against corrosion.
- b. Valves must remain in open position with plastic end covers fitted.
- c. If possible, it would be advisable to leave the ball valves in their own packing cases.
- d. Valves to be stored for a long time shall be checked by the quality control personnel every 6 months.
- e. Degreased valves shall only be unpacked before installation.

3.2 Environment conditions

- a. Valves shall be stored in dry conditions. Other corrosive environment conditions must be also avoided.
- b. Valves must be protected against ambient dust.

4. INSTALLATION

- a. Verify that valves have not been damaged during transit. Inspect inside of the valves and the pipeline of the installation to be able to verify there are no strange particles.
- b. It is advisable to use protective filters during the installation and check-in period while the possibility of dirt or even oxidation of the pipes exists. They have to be used until pipes are absolutely free of particles in suspension.
- c. If possible, valve shall be mounted in such way to allow periodic inspections.
- d. Valves are bidirectional, so fluid can run in both directions.
- e. Valves can be mounted in any position, but it is advisable to mount the valves with the stem in vertical position.

DC 08-12-07 PF - 1 -





MANUAL INSTRUCTION

FOR STORAGE, INSTALLATION, OPERATION AND MAINTENANCE OF PEKOS BALL VALVES

ANSI ZGKMS (D)			
Full Bore	Reduced Bore		
Cl. 900 NPS 3"-22"	Cl. 900 NPS 4"-22"		
CI. 1500 NPS 3"-18"	CI. 1500 NPS 4"-18"		
Cl. 2500 NPS 2 1/2"-12"	Cl. 2500 NPS 3"-12"		

Nr.196 28/05/21 Rev.7

- f. It is necessary to obtain correct alignment and parallelism to avoid any kind of stress.
- g. Once the installation is completed, valve must be operated for at least one opening and closing action to ensure perfect operation
- h. After cleaning, protective filters could be removed.
- i. Protective filters should remain installed on dirty applications.

5. MAINTENANCE

Pekos recommends inspecting the valves at least every five (5) years. These inspection intervals could be affected by the process service (fluid, temperature, service, and cycles), and environmental condition.

5.1 Valve's revision

PEKOS ball valves do not need lubrication and the packing does not need maintenance.

Stem packing (7), cover seal (109), body seals (14 and 34), stem bearings (165), seats (47), seat seals (46), ball (3) and stem (5) can be replaced easily using common tools. As replacement pieces is advisable to follow the instructions below table1. Prior to carrying out work on valves the pipeline must be completely empty, including the ball valve body cavity by half opening valve to allow any pressure build up to escape.

Care must be taken to avoid contact with dangerous or toxic chemical products. The valves must be thoroughly cleaned, in particular the body cavity, before handling and dismantling.

5.2 Stem leakage

- a. Remove subjection ring (50) and subjection ring seal (110), remove ISO cover (149) and body cover 1 (151) by loosening cover bolts 153).
- b. Remove the *spring washers* (9), the *gland packing* (8), the cover seal (109), the stem packing (7) and the stem bearings (165) and replace them.
- c. Reassemble the pieces accordingly as it is indicated in point 6.
- d. This process can be carried out with the valve under pressure due to the *double block and bleed* characteristic. The only condition is that the valve must be totally opened or totally closed.

5.3 Body leakage

These ball valves PEKOS ANSI are constructed in 3 pieces, body 1 (1) and 2 body 2 (2). Body fasteners should be checked for tightness. If leakage occurs and if necessary, body seals (14 and 34) should be replaced as it is shown:

- a. Make alignment marks on the body 1 (1) and body 2 (2) prior to dismantling, to ensure a correct alignment when reassembling.
- b. Remove studs (41) and disassemble the bodies 2 (2).
- c. Substitute body seals (14 and 34). Assemble the pieces accordingly as it is indicated in point 6.
- d. This process has to be done in one body 2 (2), and later on, in the other one.

5.4 Seat leakage

According to API598 a determined seat leakage is allowed. If the leakage is higher than the maximum allowable leakage:

- a. Maintain the valve in the closed position, lossen and remove the *nuts* (42), remove the *bodies* 2 (2) from the *body* 1 (1). Remove the *seats* (47) and change the *seat seals* (46).
- b. If it is necessary to replace the seats (47), the ball also has to be replaced. The surface finish between both components is special and they are supplied as a collection.
- c. Reassemble the pieces accordingly as it is indicated in point 6.
- d. This process has to be done in one body 2 (2), and later on, in the other one.

6. ASSEMBLY

- a. Prior to re assembly all components and body cavity should be cleaned of any incrustation, dirt, rust etc., especially in the locations of seats & seals.
- b. Put the bearings (31) in the support bearings (33).
- c. Put the stem bearing (165) and the cover seal (109) onto the body cover 1(151).
- d. Check the antistatic devices (pos. 19, 20).
- e. Assembly the stem (5) into the body cover 1 (151). Place the stem packing (7), the gland packing (8) and the spring washer (9) into the housing.
- f. Place the spring seats (45) into its housing in the body 2 (2). Introduce the ring seat b (44b), the seat seals (46) and the metal seats (47) in the body 2 (2).
- g. Assemble the support bearing (33) in the ball (3) using the pins (22) in one body 2 (2).
- h. Put the body seals (14 and 34) into their housing of the body 1 (1) and assemble the body 1 (1) with the body 2 (2). Join them by means of studs (41) and nuts (42).
- i. Maintain the valve in its closed position and position body 2 (2) to body (1) ensuring that alignment marks are matched. Assemble studs (41) and the nuts (42) evenly tighten in diagonal using a torque wrench and the values indicated attached in document DC-08-07-03 PF "Screw torque".
- j. After placing the pins (22), place the body cover 1 (151) together with the stem (5) into its housing in the body 1 (1).
- k. After placing the pins (22), place the ISO cover (149) and the stem bearing (165) in the body cover 1 (151), place the ISO cover bolts (153) and tighten them.
- I. Place de subjection ring seal (110) and subjection ring (50) into the stem (5).
- m. Screw the drain and vent plugs (86 and 86a).
- n. Slowly cycle the valve until completing 1 cycle to ensure coupling between the seats (47) and ball (3).
- o. Carefully cycle the valve twice in order to check the correct working. Stem (5) should rotate smoothly offering resistance as indicated by the manufacturers torque figures. Tests should be carried out according to API 598, at the pressure rating that corresponds to the valve, before reinstallation.

The end user is responsible, in case that the fluid is not communicated, checking the compatibility of the service media/ fluid with the valve materials.

DC 08-12-07 PF - 2 -